

**Table 3: Details Menu (Continued)**

Menu Option	Description	Range
<b>Min Urgent Request to Change</b>	Displays the number of minimum urgent votes allowed for changing the modes, heating or cooling.	Adjustable: Range 1 to 4
<b>Changeover Min Time</b>	Shows the minimum time between changes of modes for cooling or heating.	Adjustable: Range 10 to 60 minutes

**Additional Information**

Refer to the *Verasys System Operation Overview Technical Bulletin (LIT-12012370)* for more information on the various sequences performed by adjusting the control parameters.

For additional information about Verasys, use the QR code or visit [www.verasyscontrols.com](http://www.verasyscontrols.com).



**European Single Point of Contact:**

JOHNSON CONTROLS  
WESTENDHOF 3  
45143 ESSEN  
GERMANY

**NA/SA Single Point of Contact:**

JOHNSON CONTROLS  
507 E MICHIGAN ST  
MILWAUKEE WI 53202  
USA

**APAC Single Point of Contact:**

JOHNSON CONTROLS  
C/O CONTROLS PRODUCT MANAGEMENT  
NO. 22 BLOCK D NEW DISTRICT  
WUXI JIANGSU PROVINCE 214142  
CHINA



24-10143-1434, Rev. -

(Barcode for factory use only.)



**Zone Coordinator -  
Changeover Bypass  
COBP QUICK START GUIDE**



# GETTING STARTED

This guide provides you with the minimum configuration requirements to quickly bring the system communication and control online with the Smart Building Hub (SBH).

## Unit Menu

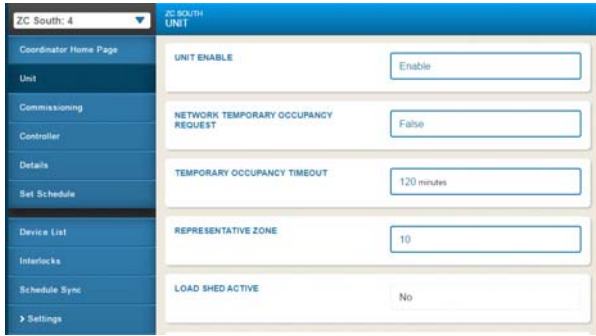


Table 1: Unit Menu

Menu Option	Description	Range
Unit Enable	Validates that the unit is set to Auto.	Adjustable: Shutdown/ Enable
Temporary Occupancy Timeout	Enables temporary occupancy timeout. The default is 120 minutes. This selection sets all the zones on the system.	Adjustable: 30 to 480 minutes

## Commissioning Menu

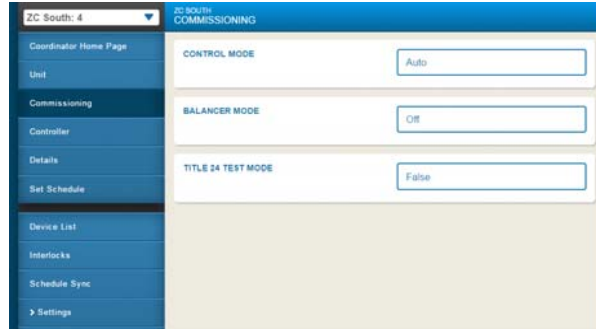


Table 2: Commissioning Menu

Menu Option	Description	Range
Control Mode	Validates that the unit is set to Auto.	Adjustable: Heat, Cool, Fan Only, Auto, Off
Balancer Mode	Enables Balancer Mode. When you are not using the Balancer Mode, ensure this parameter is set to Off.	Adjustable: On, Off

## Details Menu

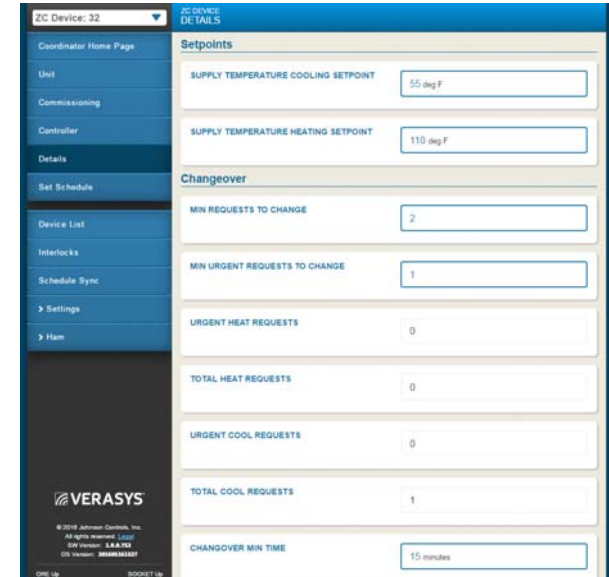


Table 3: Details Menu

Menu Option	Description	Range
Supply Air Temperature Setpoint	Controls to this value for cooling and heating.	Adjustable: cooling range 40 to 69°F heating range 90 to 130°F
Min Request to Change	Shows the minimum number of votes for changing the modes, heating or cooling.	Adjustable: 1 to 4 votes